


## IronStrike GrandView Wood Series Blower Motor Wiring Schematic



**Figure 35 - Blower Controls**

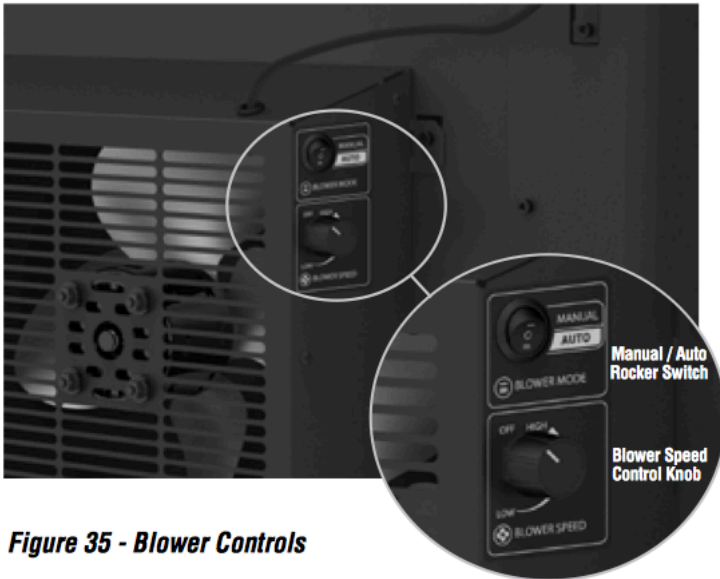

NOTE: SWITCH CONDITIONS  
GIVEN AT ROOM TEMPERATURE

N/C = NORMALLY CLOSED  
N/O = NORMALLY OPEN

—< = FEMALE DISCONNECT  
—> = MALE DISCONNECT  
—○ = STUD CONNECTION

