

IronStrike Wood Stove Blower Motor Wiring Schematic



**Blower Speed Control
 Knob (rheostat)**

**Manual / Auto
 Rocker Switch**



NOTE: SWITCH CONDITIONS
 GIVEN AT ROOM TEMPERATURE

N/C = NORMALLY CLOSED
 N/O = NORMALLY OPEN

—< = FEMALE DISCONNECT
 —> = MALE DISCONNECT
 —○ = STUD CONNECTION

