



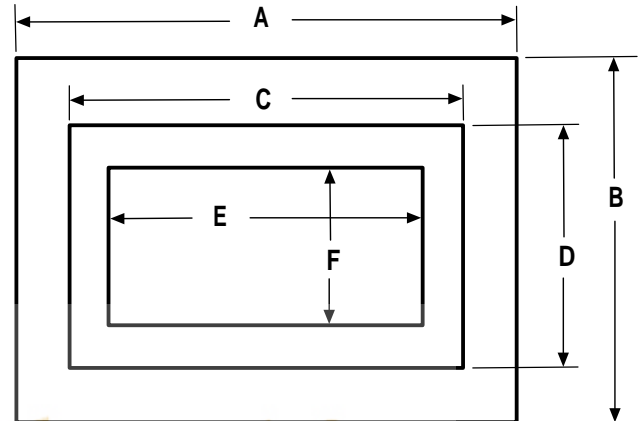

P506020-32

506020-32 REV.NC 04/2015

**INSTALLATION INSTRUCTIONS FOR CONTEMPORARY FAÇADE KITS  
FOR USE WITH GEMINI CD AND DRC3000 FIREPLACES**

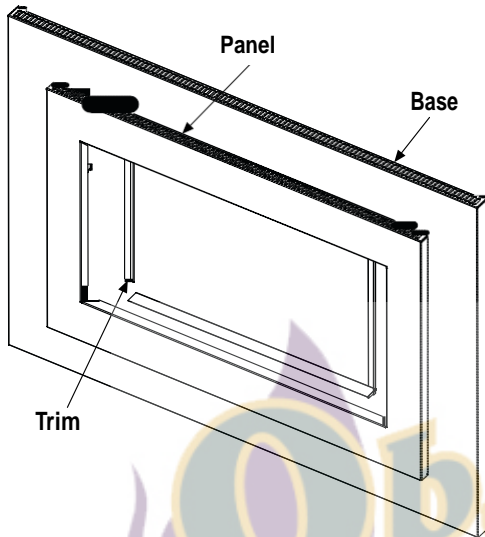

**Façade Dimensions**

	A	B	C	D	E	F
35" Model	44 1/2 (1130)	32 7/8 (835)	35 1/2 (902)	23 7/8 (606)	29 (737)	16 (406)
40" Models	49 1/2 (1257)	37 7/8 (962)	40 1/2 (1029)	28 7/8 (733)	34 (864)	21 (533)

Table 2

**Contemporary Façade Units**

Description	35" Models		40" Models	
	Catalog No.	Model No.	Catalog No.	Model No.
Façade Base Black	F2460	FBBK35CD	F2462	FBBK40CD
Façade Base Stainless	F2461	FBSS35CD	F2463	FBSS40CD
Façade Panel Black	F2464	FPBK35CD	F2466	FPBK40CD
Façade Panel Stainless	F2465	FPSS35CD	F2467	FPSS40CD
Trim Kit Black	F2468	TKBK35CD	F2469	TKBK40CD
Trim Kit Stainless	F2470	TKSS35CD	F2471	TKSS40CD

Table 1

**GENERAL INFORMATION**

The Contemporary Façade Kit is composed of three separate elements (one base, one panel, and one trim kit) that are purchased separately. Refer to **Table 1**.

**NOTE:** To complete one Façade a selection of one Base, one Panel and one Façade Trim must be made.

The Panel must be installed on a properly positioned Gemini CD or DRC3000 fireplace. Refer to Installation Instruction and Care and Operations (ICO) manuals for detailed instructions. Refer to **Table 2** for façade significant dimensions.

**INSTRUCTIONS**



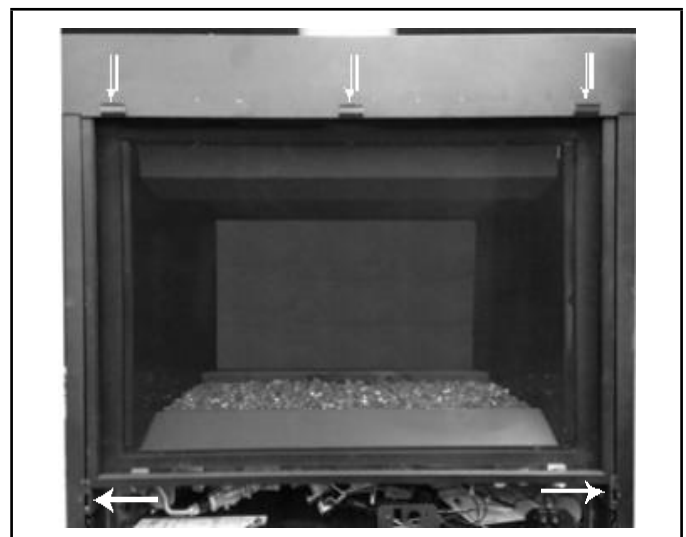


Figure 1

Start by locating the fireplace face brackets indicated by the arrows at the top **Figure 1** and the fireplace face foot slots indicated by the arrows at the bottom of **Figure 1**. Proceed with the steps on **Page 2**.

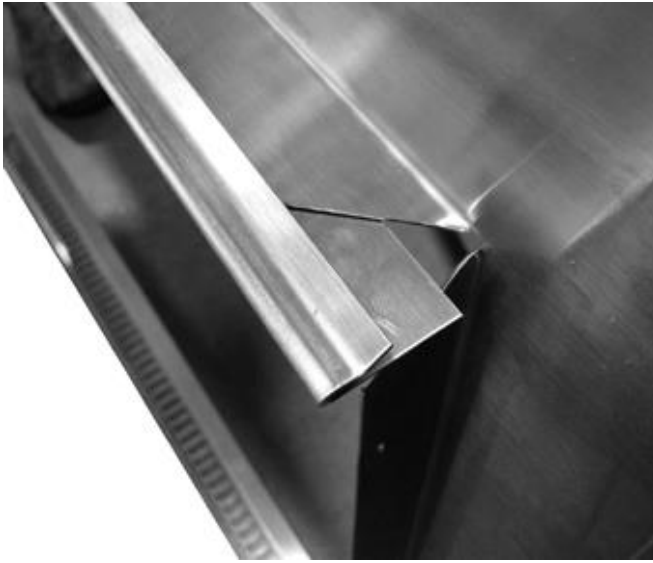

**Step 1.** Slide top trim pieces over flange of panel until seated squarely.

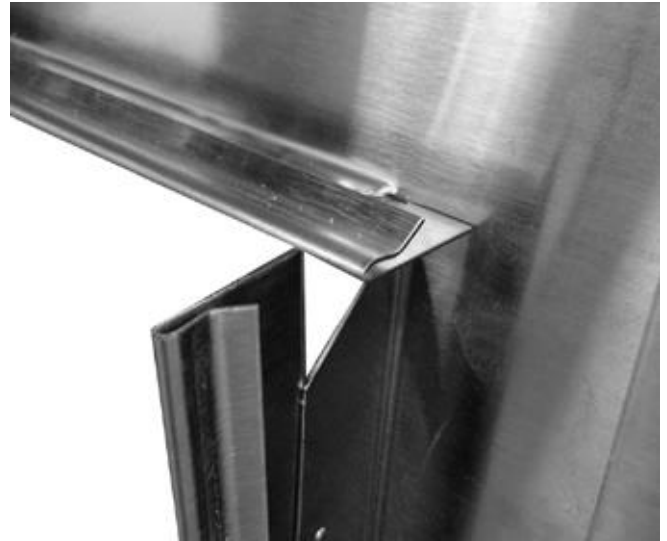


**Step 2.** Slide side trim pieces into place (top will overlap slightly). Repeat Step 1 and Step 2 for bottom and opposite side trim for panel.




**NOTE:** Remove protective flim from all stainless components before installation.



**Step 3.** Plug lead wires into the IPI Switch on right side of facade base.

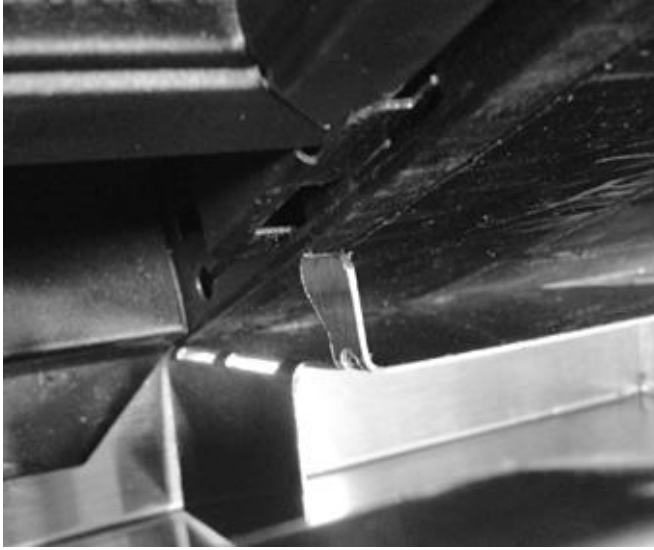

**Step 4a.** Slide the foot tabs of the facade base into the slots (see *Figure 1*) on both sides near the bottom of the fireplace opening.

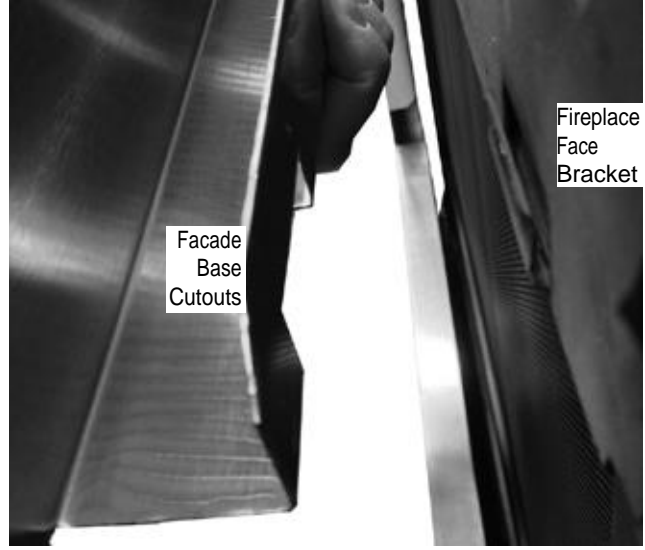

**Step 4b.** Tilting the facade base up on its foot tabs, secure the top by engaging the three brackets (see *Figure 1*) on the face of the fireplace with the three cut outs on the back top of the facade base.



**Step 5.** Slide the tabs on the back of both sides of the facade panel into the slots on the base.



(Black Base and Stainless Panel shown)